Lab 4

Connectivity

The goal of this Lab is to provide connectivity to your application, meaning that you will send (and receive) data. We will start by setting up the physical layer, then we will move to the Transport and application layer. An accompagning source code for this Lab is available at https://github.com/efrei-paris-sud/Lab-Four/src

Reminder

- All bugs that you will encounter should be filled as issues in this repository https://github.com/efrei-paris-sud/Lab-Four/ issues;
- The more non-trivial issues you fill and more generally the more acitve you are in GitHub, the more you get good appreciation for your final mark from us;
- This being said, before submitting a bug, try to resolve it by "google"-ing or "stackoverflow"-ing it and don't hesitate to resolve your own or other's issues;
- You will find the format for issuing a bug here https://github.com/efrei-paris-sud/Lab-One/issues/1.

4.1 A simple server

4.1.1 Installation

See README.md in the server folder.

Contents of db.json

This file will encompass all the measurements that will be sent to the server from the ESP32. Here is the format (json) of a measurement in the database.

4.1.2 Result

Here is what you will get in your terminal and in your browser respectively after installing and launching the server :

```
$ json-server db.json

\{^_}/ hi!

Loading db.json
Done

Resources
http://localhost:3000/temperature

Home
http://localhost:3000

Type s + enter at any time to create a snapshot of the database
GET /db 200 19.273 ms - 76

GET /__ruse 404 3.542 ms - 2
GET /_temperature 200 26.592 ms - 45
```

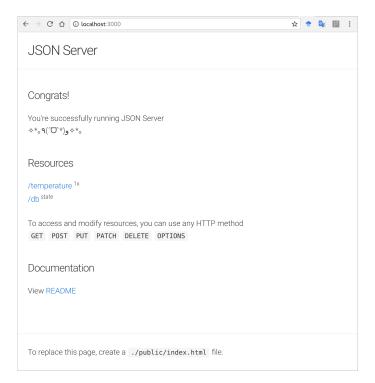


FIGURE 4.1 - This is what you should get when you navigate to localhost: 3000

4.2 Establish a local network

Here, you will need to make your smartphone as a hotspot. The ESP32 as well as your computer, which will play the role of a server, have to be connected to this network. Take a look at src/phy_layer.c and set the right credentials.